





### cliQlock Basismodul | Basic module


- de** Montageanleitung
- en** Mounting Instructions

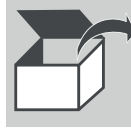


#### Abmessungen | Dimensions

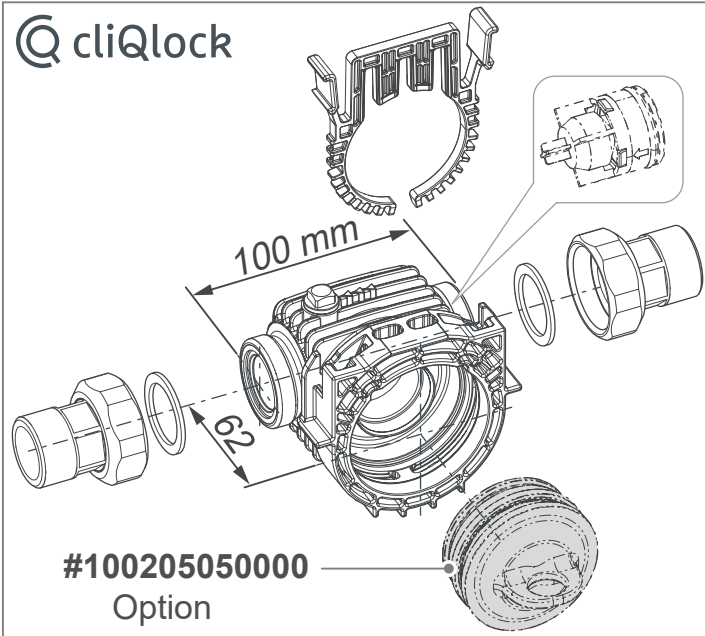


DN 20 (3/4")  
#101000070000

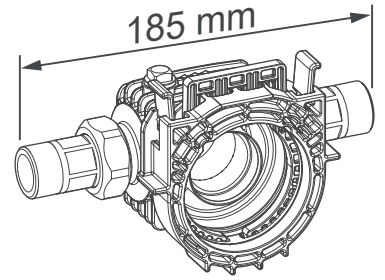


DN 25 (1")  
#101000080000

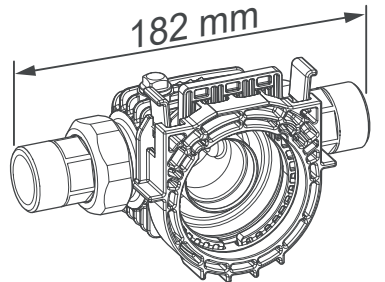


DN 32 (1 1/4")  
#101000090000

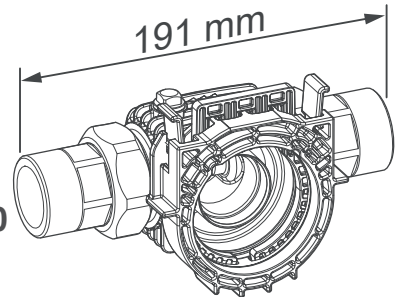


#### Einbaumöglichkeiten | Installation options ▶ nur Fachkraft | qualified specialists only

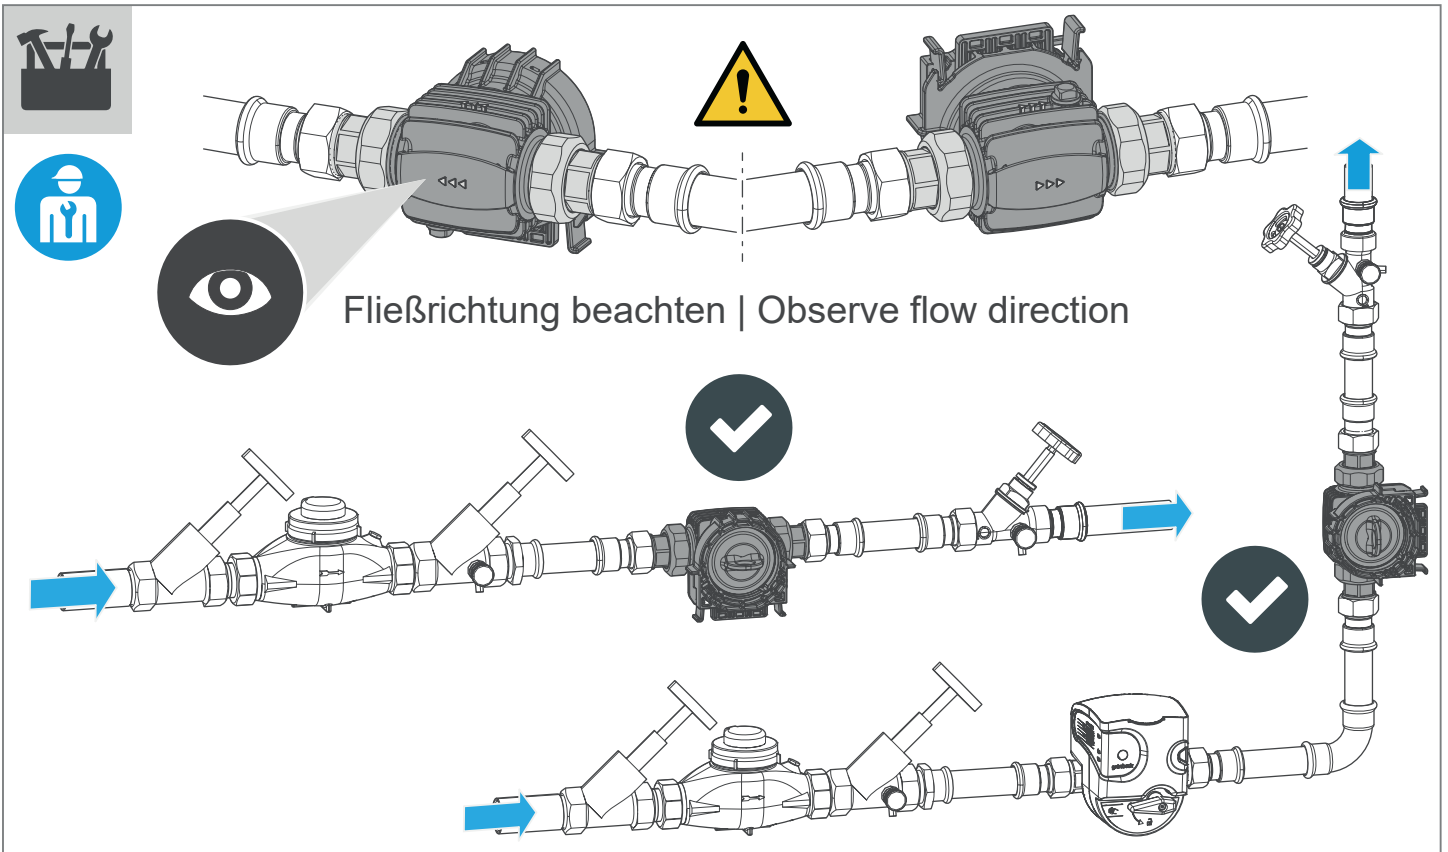


Anschlussverschraubung in Rohrleitung installieren |  
Installing the screw connection in the pipe

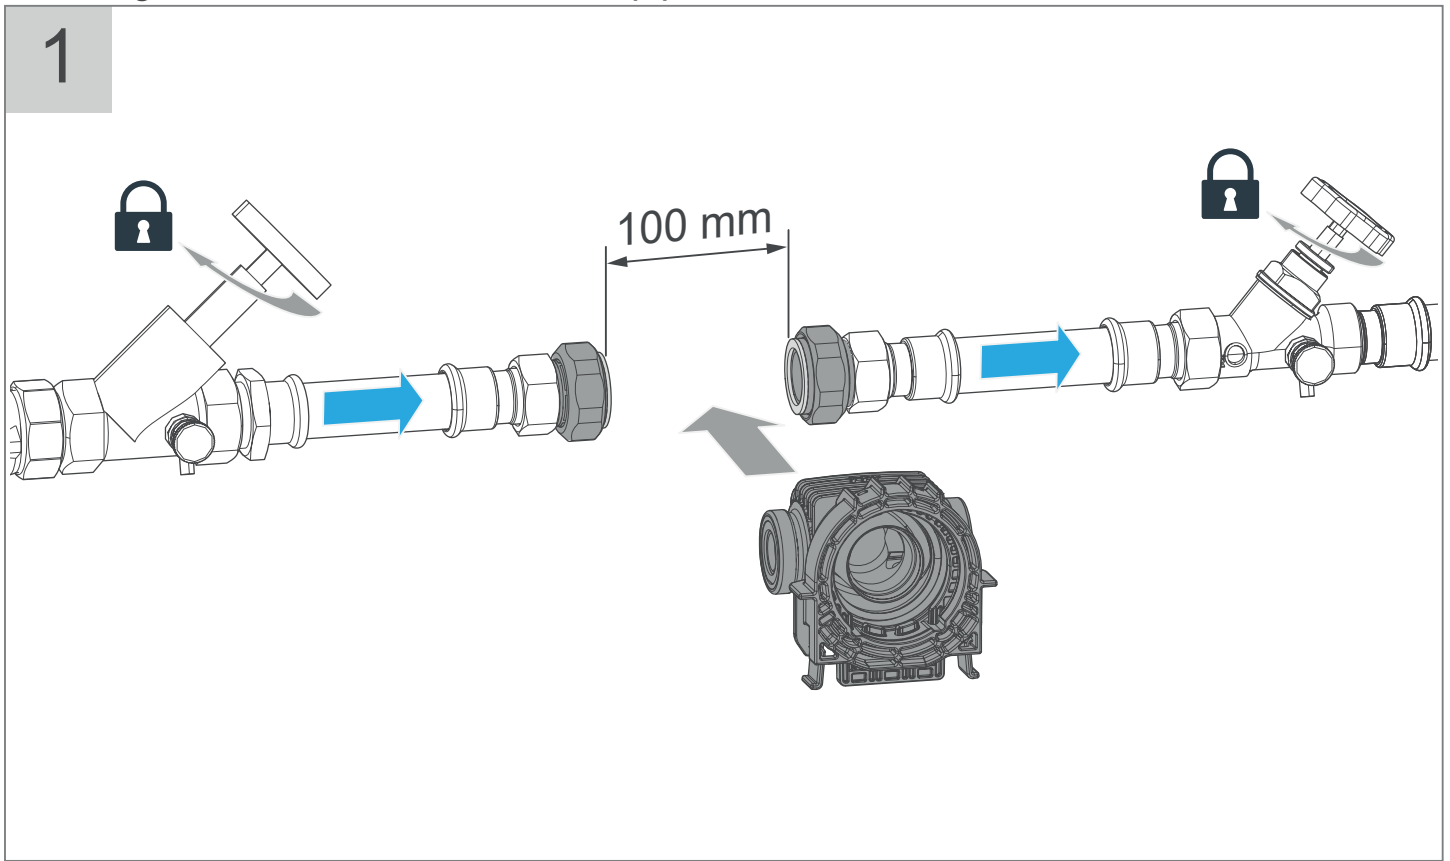


Basismodul befestigen | Fastening the basic module

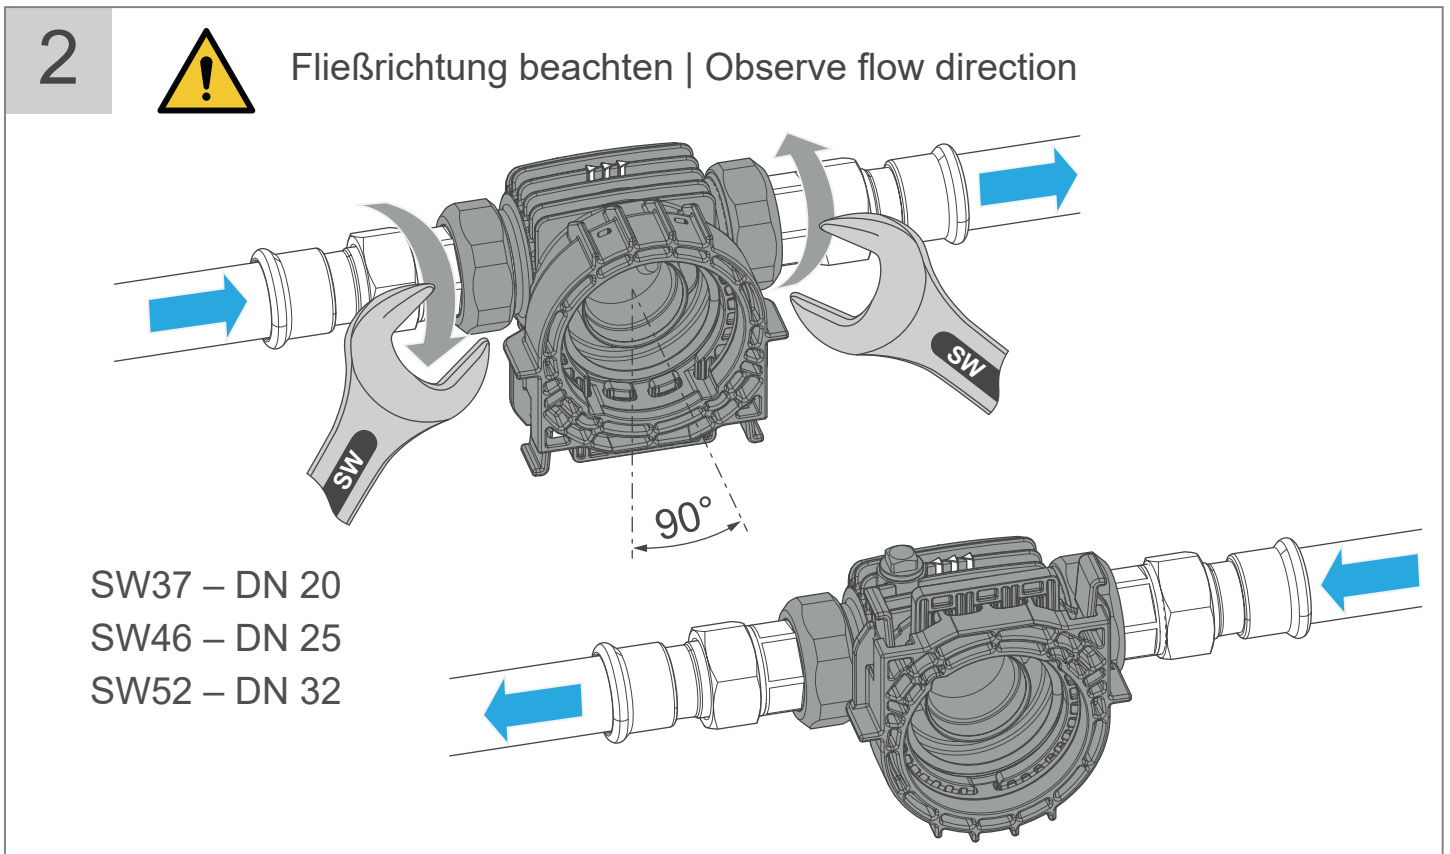


Verschlusskappe anbringen | Attaching the cap

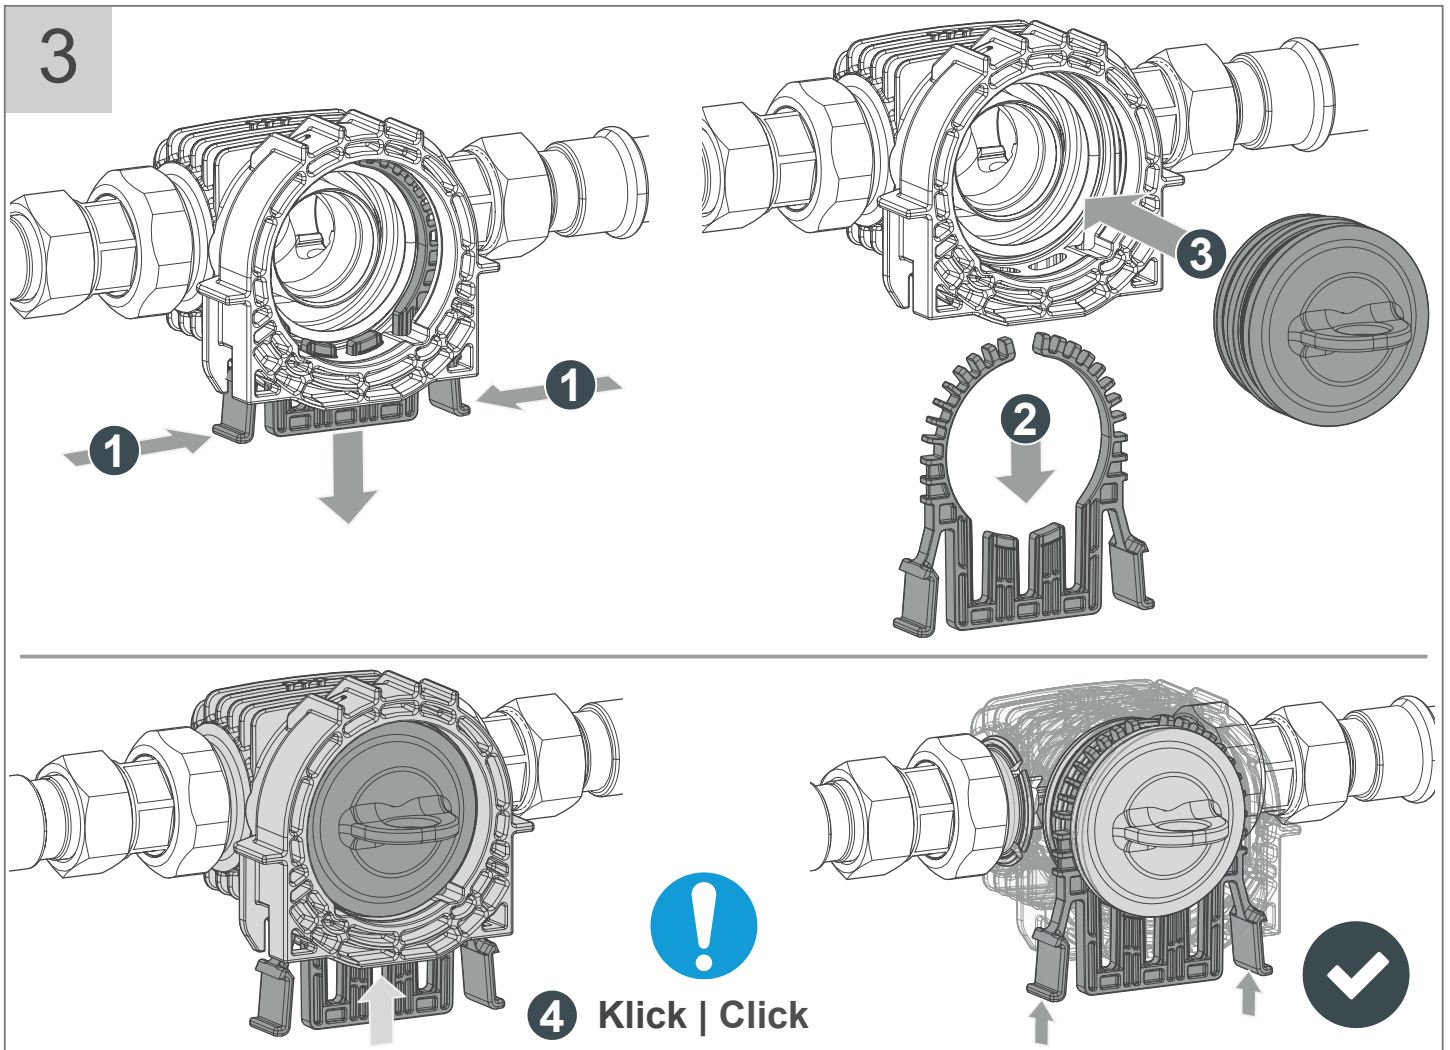

Dichtheit prüfen | Checking for leaks

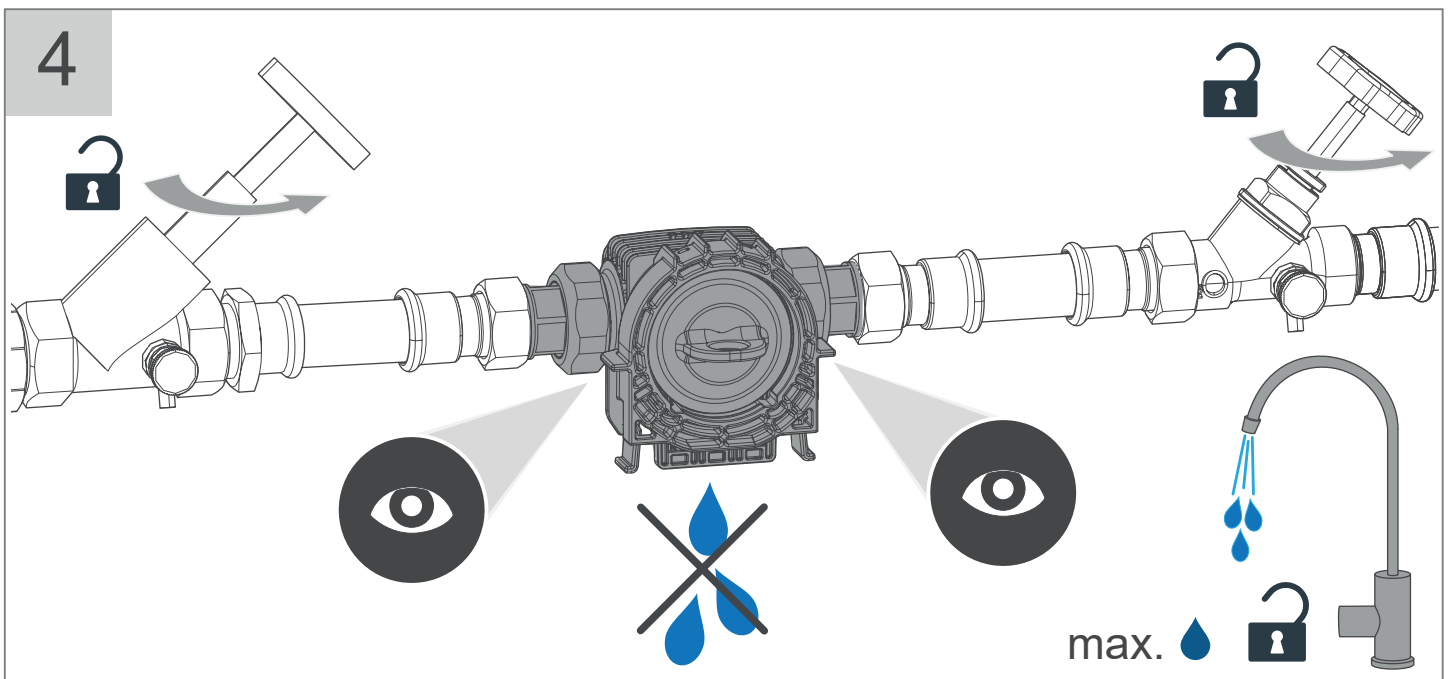

Basismodul für Enthärtungsanlage und Filter montieren |  
Mounting the basic module for the water softener and the filter

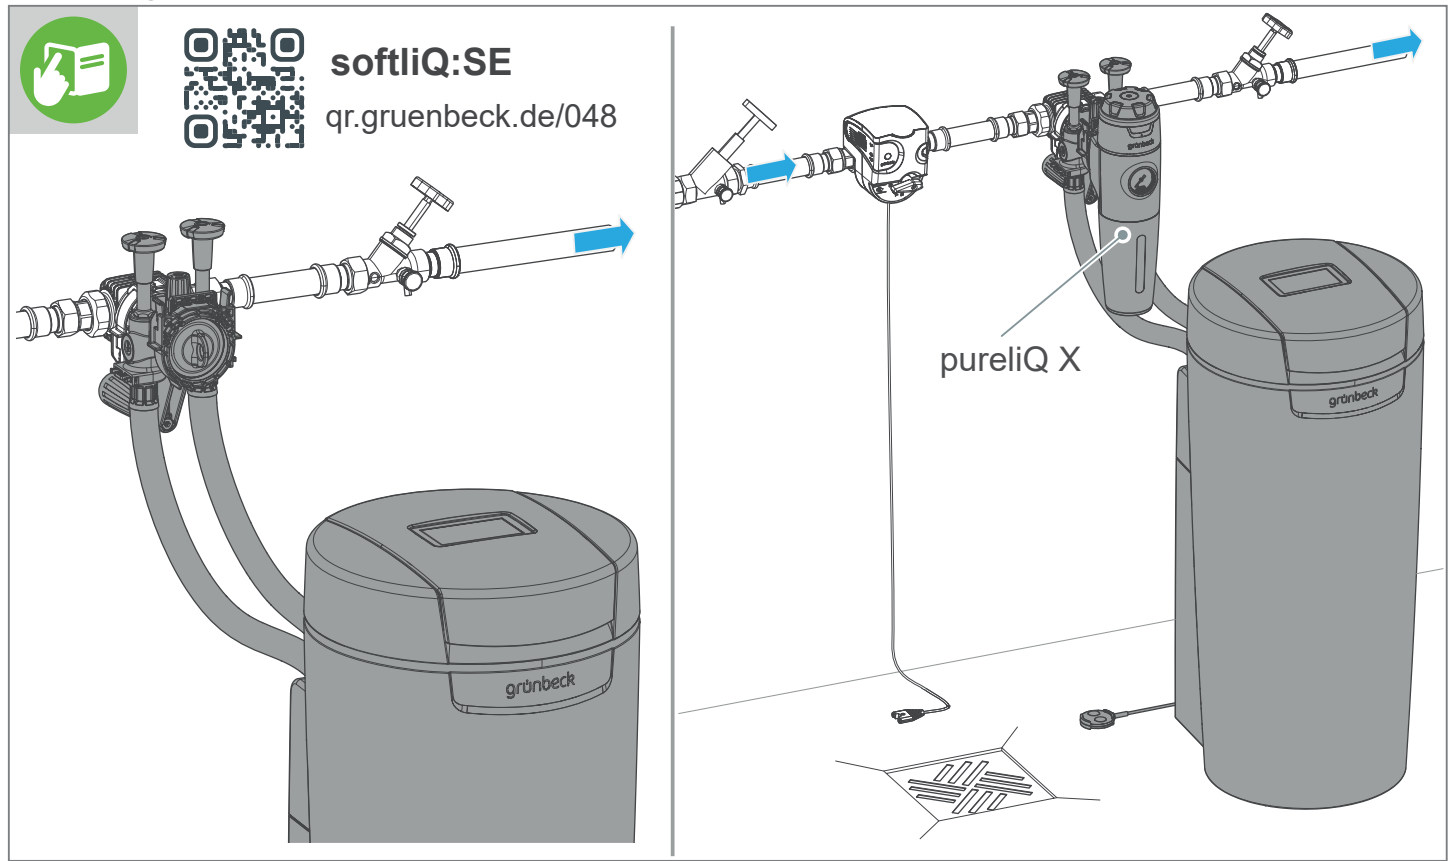

Filter montieren | Installing the filter **pureliQ X**

